


Size 22 mm Actuators

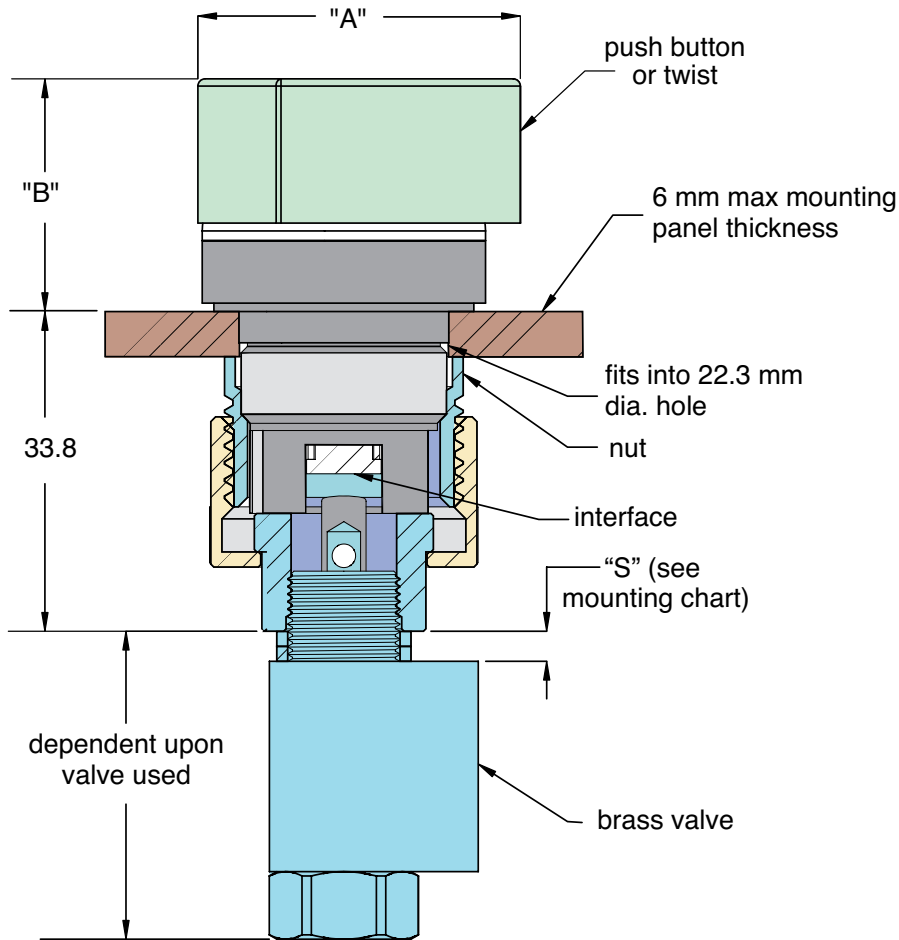

M-PB-22-X Adapter			
Actuator	Adapter	„A“	„B“
P22-P2F-	M-PB-22-P	30.5	11.4
P22-P2E-	M-PB-22-P	30.5	16.5
P22-P2M-	M-PB-22-P	40.6	21.6
P22-L3M-	M-PB-22-K	36.8	25.4
P22-L4M-	M-PB-22-K	36.8	30.5
P22-T2T-	M-PB-22-T	30.5	23.5
P22-T3T-	M-PB-22-T	30.5	23.5
P22-T3K-	M-PB-22-T	30.5	25.4
P22-K3K-	M-PB-22-T	30.5	25.4

Spacer Requirements	
Valves	
HV-3, -4, MAV-2, -2P, -2R, -3R, -3, -3P	„S“ None
GV-2, -3 MAVO-2, -3 MJV-2, -3 MJVO-2, -3	3.2
MAV-4, -4D MJV-4, -4D	None
ES-1 FV-3, -3P, -3D, -3DP FV-4, -4P, -4D, -4DP FV-5, -5P, -5D, -5DP	3.2