




# PUSH BUTTON ACTUATORS

## Manual Actuators

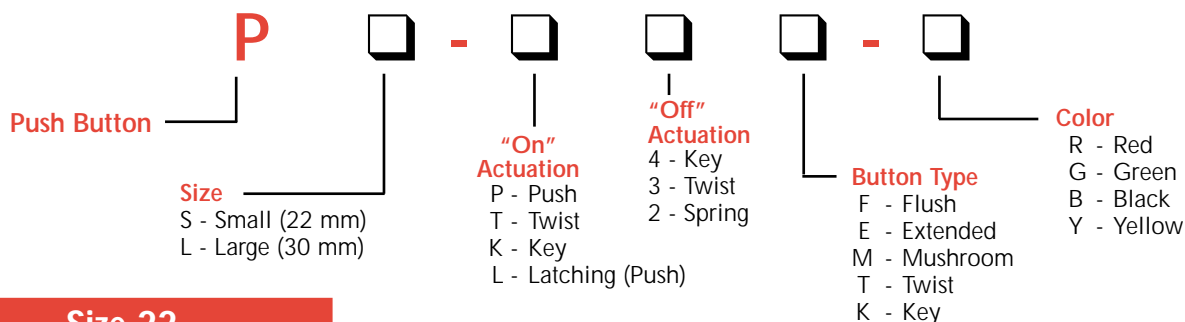

## Size 22



**Flush Push Button.**  
Manual Push "In".  
Spring Return.

Part No.	Description
PS-P2F-R . . .Red	
PS-P2F-G . . .Green	
PS-P2F-B . . .Black	
PS-P2F-Y . . .Yellow	



**Extended Push Button.**  
Manual Push "In".  
Spring Return.

Part No.	Description
PS-P2E-R . . .Red	
PS-P2E-G . . .Green	
PS-P2E-B . . .Black	
PS-P2E-Y . . .Yellow	



**Manual Push Mushroom.** Manual Push "In". Spring Return.

Part No.	Description
PS-P2M-R . . .Red	
PS-P2M-G . . .Green	
PS-P2M-B . . .Black	



**Automatic Push/Turn Mushroom.** Manual push "In" Latches "In". Turn clockwise to unlatch. Spring return.

Part No.	Description
PS-L3M-R . . .Red	
PS-L3M-G . . .Green	
PS-L3M-B . . .Black	



**Push Key Push Button.**  
Manual push "In". Spring return. Turn key counter-clockwise to lock "Out"; clockwise to unlock. Key withdrawable locked or unlocked. Black only.

Part No.	Description
PS-P4K-B . . .Black	



**Push Key Mushroom.**  
Manual push "In". Automatic latches "In". Turn key clockwise to release. Spring return. Key withdrawable "Out" position only. Red only.

Part No.	Description
PS-L4M-R . . .Red	



**Spring Return Twist 45°.**  
Turn clockwise and hold for "In". Release for spring return. Black only.

Part No.	Description
PS-T2T-B . . .Black	



**Maintained Twist 90°.**  
Turn clockwise to latch "In". Turn counterclockwise to release. Black only.

Part No.	Description
PS-T3T-B . . .Black	



**Key Twist 90° Maintained.**  
(PS-T3K-B) Turn key clockwise to latch "In". Turn key counterclockwise to release. Key withdrawable in both positions. Black only.

(PS-K3K-B) Same as PS-T3K-B except key is withdrawable in "Out" position only.

Part No.	Description
PS-T3K-B . . .Black	
PS-K3K-B . . .Black	