




PUSH BUTTON ACTUATORS

Manual Actuators

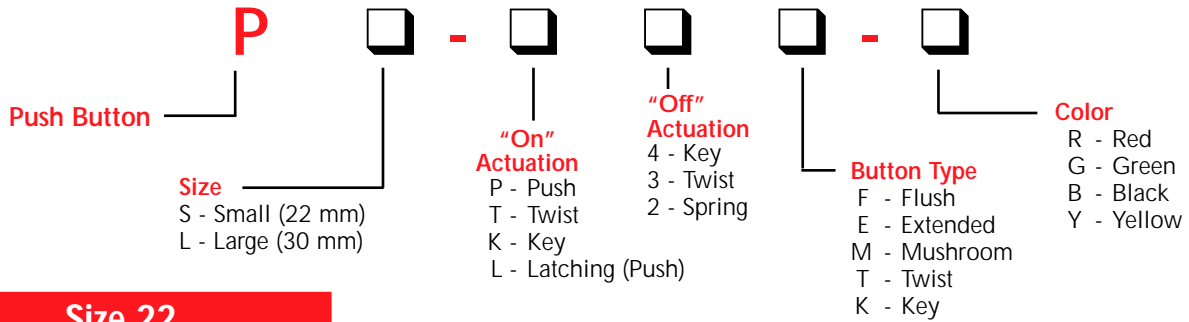

Size 22



Flush Push Button. Manual Push "In". Spring Return.

Part No.	Description
PS-P2F-R . . .	Red
PS-P2F-G . . .	Green
PS-P2F-B . . .	Black
PS-P2F-Y . . .	Yellow



Extended Push Button. Manual Push "In". Spring Return.

Part No.	Description
PS-P2E-R . . .	Red
PS-P2E-G . . .	Green
PS-P2E-B . . .	Black
PS-P2E-Y . . .	Yellow



Manual Push Mushroom. Manual Push "In". Spring Return.

Part No.	Description
PS-P2M-R . . .	Red
PS-P2M-G . . .	Green
PS-P2M-B . . .	Black



Automatic Push/Turn Mushroom. Manual push "In" Latches "In". Turn clockwise to unlatch. Spring return.

Part No.	Description
PS-L3M-R . . .	Red
PS-L3M-G . . .	Green
PS-L3M-B . . .	Black



Push Key Push Button. Manual push "In". Spring return. Turn key counter-clockwise to lock "Out"; clockwise to unlock. Key withdrawable locked or unlocked. Black only.

Part No.	Description
PS-P4K-B . . .	Black



Push Key Mushroom. Manual push "In". Automatic latches "In". Turn key clockwise to release. Spring return. Key withdrawable "Out" position only. Red only.

Part No.	Description
PS-L4M-R . . .	Red



Spring Return Twist 45°. Turn clockwise and hold for "In". Release for spring return. Black only.

Part No.	Description
PS-T2T-B . . .	Black



Maintained Twist 90°. Turn clockwise to latch "In". Turn counterclockwise to release. Black only.

Part No.	Description
PS-T3T-B . . .	Black



Key Twist 90° Maintained. (PS-T3K-B) Turn key clockwise to latch "In". Turn key counterclockwise to release. Key withdrawable in both positions. Black only.

(PS-K3K-B) Same as PS-T3K-B except key is withdrawable in "Out" position only.

Part No.	Description
PS-T3K-B . . .	Black
PS-K3K-B . . .	Black