

PUSH BUTTON ACTUATORS



Size 30



Flush Push Button.
Manual push "In".
Spring return.

Part No. Description

- PL-P2F-RRed
- PL-P2F-GGreen
- PL-P2F-BBlack
- PL-P2F-YYellow



Extended Push Button.
Manual push "In". Spring
return.

Part No. Description

- PL-P2E-RRed
- PL-P2E-GGreen
- PL-P2E-BBlack
- PL-P2E-YYellow



**Key Twist 90°
Maintained.** (PL-
T3K-B) Turn key
clockwise to latch
"In". Turn key
counterclockwise
to release. Key
with-drawable in both positions. Black
only.

(PL-K3K-B) Same as PL-T3K-B except key is
withdrawable in "Out" position only.

Part No. Description

- PL-T3K-B . . .Black
- PL-K3K-B . . .Black



**Automatic Push/Turn
Mushroom.** Manual push
"In". Latches "In". Turn
clockwise to unlatch.
Spring return.

Part No. Description

- PL-L3M-R . . .Red
- PL-L3M-G . . .Green
- PL-L3M-B . . .Black



**Push Key Push
Button.** Manual push
"In". Spring
return. Turn
key counter-
clockwise to
lock "Out"; clockwise to unlock. Key
withdrawable locked or unlocked.
Black only.

Part No. Description

- PL-P4K-B . . .Black



**Push Key
Mushroom.**
Manual push
"In". Automatic
latches "In".
Turn key clock-
wise to release. Spring return. Key with-
drawable "Out" position only. Red only.

Part No. Description

- PL-L4M-R . . .Red



**Spring Return Twist
45°.** Turn clockwise
and hold for "In".
Release for spring
return. Black only.

Part No. Description

- PL-T2T-B . . .Black



Maintained Twist 90°.
Turn clockwise to latch
"In". Turn counterclock-
wise to release. Black
only.

Part No. Description

- PL-T3T-B . . .Black



**Manual Push
Mushroom.** Manual
push "In". Spring
return.

Part No. Description

- PL-P2M-R . . .Red
- PL-P2M-G . . .Green
- PL-P2M-B . . .Black