




# MANIFOLDS

## Block Manifolds

The BHH series has mounting holes for #6 screws at each end. One of the stations must be used as the air supply to the manifold.

Part #	# of Stations	Fitting Size
<a href="#">BHH2-04</a>	4	1/16" I.D. Hose Barb
<a href="#">BHH2-06</a>	6	
<a href="#">BHH2-08</a>	8	
<a href="#">BHH2-10</a>	10	
<a href="#">BHH2-12</a>	12	
<a href="#">BHH4-04</a>	4	1/8" I.D. Hose Barb
<a href="#">BHH4-06</a>	6	
<a href="#">BHH4-08</a>	8	
<a href="#">BHH4-10</a>	10	
<a href="#">BHH4-12</a>	12	

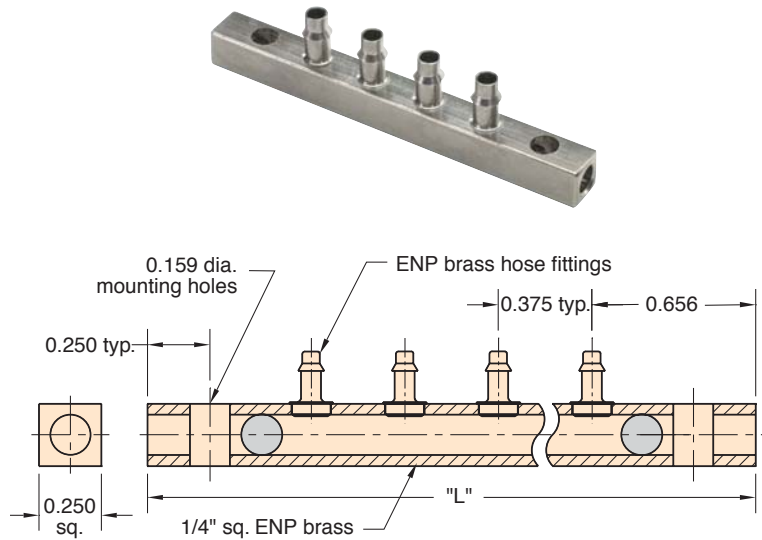

The BTT series Block Manifold has #10-32 holes at each end for inline mounting. One end may be used as the air supply to the manifold and the other end plugged.



Part #	# of Stations	Fitting Size
<a href="#">BTT2-04</a>	4	1/16" I.D. Hose Barb
<a href="#">BTT2-06</a>	6	
<a href="#">BTT2-08</a>	8	
<a href="#">BTT2-12</a>	12	
<a href="#">BTT4-04</a>	4	1/8" I.D. Hose Barb
<a href="#">BTT4-06</a>	6	
<a href="#">BTT4-08</a>	8	
<a href="#">BTT4-10</a>	10	
<a href="#">BTT4-12</a>	12	

