


PB-30-X Adapter Installation

1. Insert actuator into hole in panel
2. Thread panel locking nut onto button
3. Align actuator, tighten up to panel
4. Insert swivel adapter into hole in housing
5. Slide spacers onto thread of valve (if needed)
6. Thread valve onto swivel adapter
7. Thread housing onto actuator
8. Align as needed, tighten all connections

Valve	Spacer
MAV-2, -2P, -2R, -3R, 3, -3P	None
GV-2, 3, MAVO-2, -3, MJV-2, -3, MJVO-2, -3	1/8"
MAV-4, -4D, MJV-4, -4D FV-3, -3P, -3D, -3DP	None
FV-4, -4P, -4D, -4DP FV-5, -5P, -5D, -5DP	1/8"

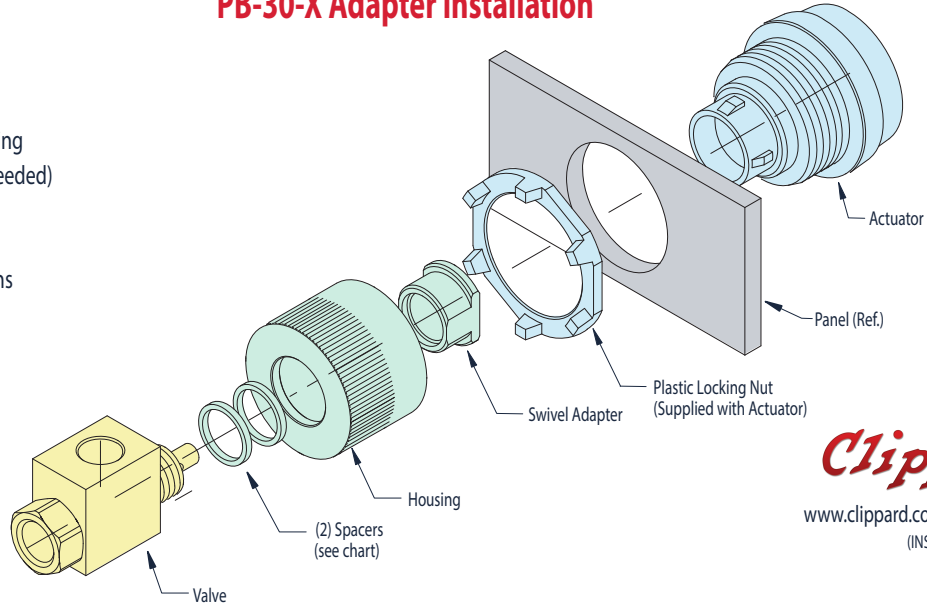

Clippard

www.clippard.com • 1-877-245-6247

(INS-PB-30)