
OXYGEN CLEAN EV SERIES





For applications that are particularly sensitive to contamination, Clippard's EV series valves are also available in an oxygen clean version. Oxygen clean EV valves are manufactured and assembled using a special cleaning process that includes:

- · Ultrasonic cleaning, assembly, inspection, and testing in one of Clippard's ISO 7 (class 10,000) rated clean rooms
- · Removal of organic and inorganic contaminants
- · No organic sealants, adhesives, or lubricants used in the manufacturing process
- Component parts lubricated with oxygen-compatible PFPE grease (only as needed for assembly)
- Invididual testing and inspection utilizing compressed Nitrogen and ultra-violet light

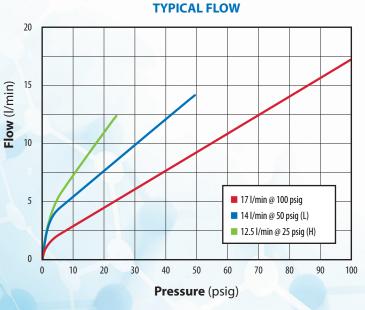











Coil Resistance	218 (12V), 864 (24V)
Connection	Pin connector, spade terminals, radial wire leads or axial wire leads
Current	0.055A (12V), 0.028A (24V)
Cycle Life	>1,000,000,000 (ideal applications)
Filtration	40 micron filter (recommended)
Function	2-way normally-open or normally-closed; 3-way normally-open, normally-closed, or fully ported
Leak Rate	0.1 sccm
Material, Body	Nickel-plated brass, ENP carbon steel, nickel iron alloy, 300 series stainless steel
Material, Seals	FKM
Material, Spring	Nickel alloy
Material, Wetted	ENP brass, nickel alloy, stainless steel, ENP steel
Max. Flow	17 l/min @ 100 psig (7 bar), 14 l/min @ 50 psig (3.4 bar), or 12.5 l/min @ 25 psig (1.7 bar)
Max. psig	105 (7.2 bar)
Medium	Clean, dry air and compatible gases
Mount	In-line or manifold
Number of Ports	2 or 3
Operating Pressure	25, 50, or 100 psig (7, 3.4, or 1.7 bar)
Operating Range	90 to 150% of rated voltage
Operating Temp. Range	32 to 180°F (0 to 82°C)
Orifice	0.060", 0.040", or 0.025" (1.52, 1.02, or 0.64 mm)
Port, Exhaust	#10-32 or M5
Port, Inlet	Manifold: #10-32 male or M5 In-Line: #10-32 female or M5
Port, Outlet	#10-32 or M5 (in-line)
Response Time	5 to 10 ms (nominal) @ 25 psig (1.7 bar)
Voltage	12 or 24 VDC
Voltage Operating Range	90 to 150%
Wattage	0.67 watts (nominal)
More Details	clippard.com/link/ev-series

¹Minimum order quantity required

Does your application have requirements beyond what is listed? Contact Clippard to discuss how this valve can be modified to meet your specific needs.

2-Way, 3-Way, and 3-Way Fully-Ported 2-Way, 3-Way, and 3-Way Fully-Ported 3-Way Fully-Ported: 3-Way Fully-Ported: N.O. Inlet N.O. Inlet 3 3 N.C. Exhaust N.C. Exhaust 2-Way 3-Way: Exhaust 3-Way: Exhaust 1.722 1.722 1.560" (43.7) 1.560" (43.7) (39.6) (39.6) 2-Way 2-Way Outlet 2 3-Way & 3-Way: & 3-Way: Inlet Inlet 0.151" (3.8) 0.870" (22.1) dia. 3-Way 3-Way Fully-Ported: **Fully-Ported:** 0.870" (22.1) dia. N.O. Exhaust. N.O. Exhaust, 2-Way N.C. Inlet N.C. Inlet & 3-Way: 1 2 outlet Inlet 0.500" (12.7)

0.215" (5.5)


#6-32 (M3x0.5) Thd. x 0.218" (5.5)

Deep Mtg. Holes

Manifold Mount

Dimensions shown are in inches (millimeters listed in parentheses). Visit clippard.com for more detailed 2D and 3D drawings.

Inline Mount

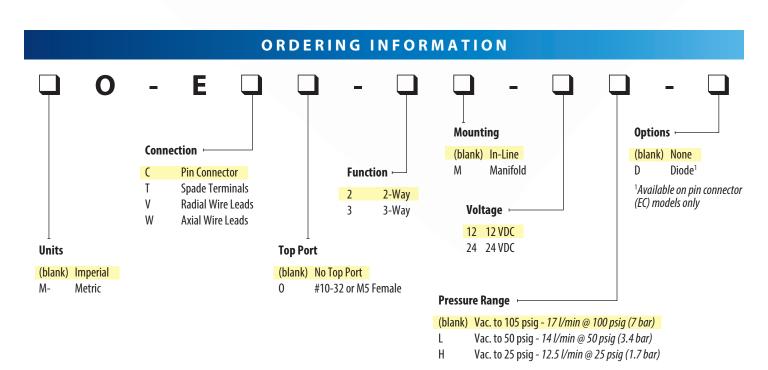

Example Part Number: 0-EC-2-12

QR code or visit clippard.com/link/ev-series

For more info, scan the

3-Way Fully-Ported: N.O. Exhaust,

N.C. Inlet



TDS O-EV-01, Rev. 011624 (2/2) 877-245-6247 | clippard.com